

**SAMCOM**  
**TWO-WAY RADIO**

# CP-480

## On-site Business Portable Radio

► *Instruction Manual*



# INTRODUCTION

Thank you for purchasing our products. Combined the latest technology along with a sturdy mechanical frame, our radios provide cost-effective communications for the people who need to stay in touch with the working team such as retail stores, restaurants, campuses and schools, construction sites, manufacturing, shows and trade fairs, property and hotel management and more, they are the perfect communication solutions for all of today's fast-paced industries.

## MAIN FEATURES

- IP55 rating water resistance & dust protection
- Rugged and heavy-duty design
- 1800mAh high capacity battery pack
- 16 channels
- 50 CTCSS tones and 214 DCS codes
- PTT ID / DTMF-ANI
- Low battery alert
- Voice prompt
- Inbuilt VOX for hands-free communication
- Channels and priority scan
- Battery save
- Lone worker mode
- Emergency alarm
- Time-out timer
- Busy channel lock-out
- PC programmable

# CONTENTS

## **01 Chapter 1: SAFETY INFORMATION**

01 Radio Care

02 Battery Care

## **03 Chapter 2: RADIO OVERVIEW**

03 Package Includes

03 At a Glance

## **06 Chapter 3: BASIC OPERATION**

06 Turn the Radio ON/OFF

06 Adjusting Volume

06 Selecting a Channel

06 Receiving a Call and Talking

## **07 Chapter 4: ADVANCED OPERATION**

07 Monitor

07 Scan

07 Squelch

07 Priority Scan

08 TX Power Level

08 Battery Save

08 PTT ID

08 VOX

08 Programming Software

## **09 Chapter 5: TROUBLESHOOTING**

## **10 Chapter 6: SPECIFICATIONS**

## **11 Chapter 7: WARRANTY INFORMATION**

# SAFETY INFORMATION

Please read this information before using your radio. Failure to do so could result in personal injury, death, and/or damage to your radio, accessories and/or other property.

## Radio Care

### Caution

- Do not disassemble or modify the radio for any reason.
- Do not transmit while touching the antenna terminal or any exposed metallic parts of the aerial as this may result in burn.
- Please check and observe regulation in your country with regards to use whilst driving.

## End of Life Disposal

When your radio reaches the end of its useful life, please ensure that the unit is disposed of in an environmentally friendly way.

## Battery Care

### Precautions

- Turn the radio OFF before charging.
- Charge the battery pack before use.
- Do not recharge the battery pack if it is already fully charged as this will use one of its charge cycles and may shorten its life. Charge the battery in accordance with the instructions enclosed with your charger.
- Do not charge the radio and battery pack if they are wet.

The battery pack includes potentially hazardous components. Please:

- Do not disassemble or reconstruct battery.

- Do not short-circuit the battery.
- Do not incinerate or apply heat to the battery.
- Do not immerse the battery in water or get it wet by other means.
- Do not charge the battery near fires or under direct sunlight.
- Use only the specified charger and observe charging requirements.
- Do not pierce the battery with any object or strike it with an instrument.
- Do not use the battery pack if it is damaged in any way.
- Do not reverse-charge or reverse-connect the battery.
- Do not touch a ruptured or leaking battery.

If liquids from the battery get on your skin or into your eyes, immediately:

- Wash your eyes out with fresh water avoiding rubbing them.
- Seek medical treatment.

**Notes:**

- If a battery is not to be used for an extended period of time (several months) remove the battery pack from the equipment and store in a cool and dry location part charged. Do not fully discharge the battery before storage.
- Each charge cycle reduces the battery's life. Minimize the number of times you charge your battery especially in hotter environments which further shorten a battery's life.

# RADIO OVERVIEW

## Package Includes

1pcs radio

1pcs rubber antenna


1pcs rechargeable Lithium-ion battery pack

1pcs AC adapter & desktop charger kit

1pcs belt clip & hand strap

1pcs user's manual

## At a Glance

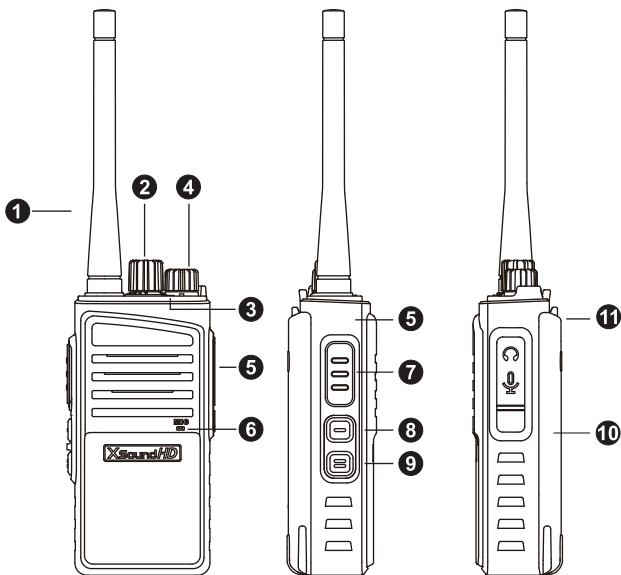

## 1 – Antenna

Provide attached SMA rubber flexible antenna.

**Note:** It may cause the damage to your radio if the antenna is connected inappropriately.

## 2 – Channel Selector Knob

Select the radio's different channels.

## 3 – LED Indicator

Give radio battery, TX & RX, VOX, scan and other status.

Radio Status	LED Indicator
Transmit (TX)	Solid red
Receive (RX) & Monitor	Solid green
PC programming / Reading data	Green heartbeat
PC programming / Writing data	Red heartbeat
Channel scanning	Green heartbeat
Low battery	Red heartbeat

## 4 – On/Off/Volume Knob

Turn the radio ON or OFF and to adjust the radio's volume.

## 5 – Audio Accessory Jack (Motorola 2 Pin Connector)

Connect compatible audio accessories.

## 6 – Microphone

Speak clearly into the microphone when transmitting.

## 7 – PTT (Push-To-Talk) Button

Press and hold down this button to transmit and talk, release it to receive and listen.

## 8 – Side Button P1

The button **P1** is a general button that can be configured by the programming software. The default setting is '**Monitor**' feature.

## **9 – Side Button P2**

The button **P2** is a general button that can be configured by the programming software. The default setting is '**Scan**' feature.

## **10 – Lithium-Ion Battery Pack**

Radio comes equipped with a rechargeable Lithium-ion battery pack. This battery should be fully charged before initial use to ensure optimum capacity and performance. Batteries are designed specifically to be used with a supplied charger and vice versa.

## **11 – Battery Latch**

Push down battery latch to release battery pack.



# BASIC OPERATION

## Turn the Radio ON/OFF

To turn on the radio, rotate on the On/Off/Volume Knob clockwise. The radio plays power up audio and channel number. To turn off the radio, rotate the On/Off/Volume Knob counterclockwise until you hear a 'Click' sound.

## Adjusting Volume

Turn the On/Off/Volume Knob clockwise to increase the volume, or counterclockwise to decrease the volume.

**Note:** Do not hold the radio too close to the ear when the volume is high or when adjusting the volume.

## Selecting a Channel

To select a channel, turn the Channel Selector Knob until you reach the desired channel. An audible voice indicates the selected channel if the channel annunciation is enable. Each channel has its own frequency, privacy code and other settings.

## Receiving a Call and Talking

1. Select a channel by rotating the Channel Selector Knob until you reach the desired channel. An audible voice indicates the selected channel.
2. Make sure the **PTT** button is released and listen for voice activity.
3. The LED indicator stays solid green when the radio is receiving a call.
4. To respond, hold the radio vertically 1 to 2 inches (2.5 to 5 cm) from mouth. Press the **PTT** button to talk; release it to listen.
5. When transmitting, the LED indicator stays solid red or yellow.

# ADVANCED OPERATON

## Monitor

This feature enables you to hear all calls even with unmatched CTCSS/DCS.

## Scan

Scan allows you to hear conversations on all channels. When the radio detects a transmission, it stops scanning and goes to the active channel. This allows you to listen and talk to people in that channel without having to channel manually. If there are transmissions on another channel, you will not hear that activity once the radio has stopped scanning. Once the activity on transmitting channel stops, the radio waits for 5 seconds before resuming scan again.

## Squelch

The Squelch function suppresses noises from free channels and allows the radio to receive even weak signal, it has 10 different levels that can be set by programming software. It is set on level 5 by default.

## Priority Scan

When the feature is activated, the radio checks in the background whether a signal is present on the priority channel.

Each programmed channel can be selected to be the priority channel. When the priority channel is activated, the channel scan is automatically interrupted when a signal is present on the priority channel. The radio remains adjusted to the priority channel until the signal finishes.

## **TX Power Level**

This feature allows you to select between high and low transmit power in each channel.

## **Battery Save**

When it is activated, the radio decreases the amount of power used after no signal is present and no operations are being performed for 5 seconds. When a signal is received or an operation is performed, this feature turns off temporarily.

## **PTT ID**

With this feature is activated, the radio will send an ID code when pressing or releasing the **PTT** button, allowing another radio and management control centers to identify it.

## **VOX**

The VOX feature enables hands free conversations without using **PTT**, just speak in the direction of the microphone and the communication will be automatically activated. The VOX sensitivity can be adjusted in 10 different levels.

## **Programming Software**

The easiest way to program or change features in your radio is via its programming software and programming cable. The programming software is available for free as downloadable software at our website.

# TROUBLESHOOTING

Problem	Possible Reasons and Potential Solutions
No Power	Recharge or replace the battery pack; Extreme operating temperatures may affect battery life.
Hearing other noises or conversation on a channel	Confirm CTCSS/DCS is set; Frequency or CTCSS/DCS may be in use; Change settings: either change frequencies or CTCSS/DCS on all radios; Make sure the radio is at the right frequency and privacy code when transmitting.
Audio quality not good enough	Radio settings might not be matching up correctly. Double check frequencies, CTCSS/DCS and bandwidths to make sure they are identical in all radios.
Limited talk range	Steel and/or concrete structures, heavy foliage, buildings or vehicles decrease range. Check for clear line of sight to improve transmission; Wearing radio close to body such as in a pocket or on a belt decreases range; Change location of radio. UHF radios provide great coverage in industrial and commercial buildings. Increasing power provides greater signal range and increases penetration through obstructions.
Can not transmitted or received	Make sure the <b>PTT</b> button is completely pressed when transmitting; Confirm that the radios have the same channel, frequency, private code and bandwidth settings; Recharge, replace and/or reposition batteries; Obstructions and operating indoors, or in vehicles, may interfere, change location; Verify that the radio is not in Scan.
Heavy static or interference	Radios are too close, they must be at least seven feet apart; Radios are too far apart or obstacles are interfering with transmission.
Low battery	Recharge or replace the battery pack; Extreme operating temperatures affect battery life.
Desktop Charger LED light does not blink	Check that the radio/battery is properly inserted and check the battery/charger contacts to ensure that they are clean and charging pin is inserted correctly.
Cannot activate VOX	VOX feature might be set to OFF; Use the programming software to ensure that the VOX sensitivity level is not set to '0'; Accessory not working or not compatible.
Battery does not charge	Check desktop charger is properly connected and correspond to a compatible AC adapter; Check the charger's LED indicators to see if the battery has a problem.

# SPECIFICATIONS

## General

Frequency Range	136-174MHz / 350-390MHz 400-480MHz / 465-520MHz
Channel Capacity	16 Channels
Channel Bandwidth	12.5 / 25KHz
Operating Voltage	7.4V DC
Dimensions (H x W x D)	112 x 57 x 33mm
Weight with battery	240g

## Transmitter

RF Power(H/L)	$\leq 5\text{W(H)} / \leq 1\text{W(L)}$
Frequency Stability	$\pm 1.5\text{ppm}$
Spurious & Harmonics	-36dBm < 1GHz, -30dBm > 1GHz
FM Hum & Noise	$\geq 40\text{dB(W)} / \geq 36\text{dB(N)}$
Modulation Deviation	$\leq 5\text{KHz(W)} / \leq 2.5\text{KHz(N)}$
Adjacent Channel Power	$\geq 70\text{dBC(W)} / \geq 60\text{dBC(N)}$
Audio Frequency Response	+1 ~ -3dB
Audio Distortion	< 5%

## Receiver

Sensitivity (12 dB SINAD)	$\leq 0.2\mu\text{V(W)} / \leq 0.3\mu\text{V(N)}$
Adjacent Channel Selectivity	$\geq 70\text{dBC(W)} / \geq 60\text{dBC(N)}$
Audio Distortion	< 5%
Radiated Spurious Emissions	< -54dBm
Intermodulation Rejection	70 dB
Audio Output	1W @ 16 ohms

Hereby, we declare that our radio is in compliance with the essential requirements and other relevant provisions of RE Directive 2014/53/EU.

# WARRANTY INFORMATION

## Warranty Period

Radio Body: 12 months from date of purchase.

Battery Pack: 6 months from date of purchase.

**Note:** Please retain your receipt as your proof of purchase will be required to valid warranty claim.




## Warranty Exclusions

This warranty will not apply in relation to:

- Failure to provide a proof of purchase
- Product has been modified, changed or serial number has been removed
- If any damage is caused by the use of non approved accessories
- Product that has been replaced by an unauthorized person
- Product failure due to customer misuse, abuse or abnormal use
- Failure by the customer to take reasonable care
- Failure due to not using the product in accordance with instructions stated in the manufacture's user guide.
- Product failure due to recommended installation procedures not being followed as stated in the manufacture's user guide.

More warranty relative information please read our Warranty Policy on the website.

***SAMCOM***

 [www.samradios.com](http://www.samradios.com)  +86-595-86713710  [info@samradios.com](mailto:info@samradios.com)

MADE IN CHINA